

160634 FPS6000 Flat Screen TV Stand
Inside

1/1 C (Pantone Process Black)

Size: 11" x 17" (Folded to 8.5" x 11")
Print at actual size

DO NOT Print dyelines


Assemble the VESA Bracket

IMPORTANT NOTE

REFER TO YOUR TV'S MANUAL TO DETERMINE THE BOLT-PATTERN FOR YOUR PARTICULAR MODEL.

1. For TVs with 100 x 100 patterns or smaller, do not use the ear tabs. Store them for future use. Skip to step 2.

For TVs with 100 x 200 or 200 x 200 patterns, bolt the two ear tabs (C) to the VESA mount (B) with the supplied nuts and bolts. Note that the bolts must go through the front of the mount for clearance, with the hex nuts located on the back side of the mount as shown in Figure A. Fully Tighten.

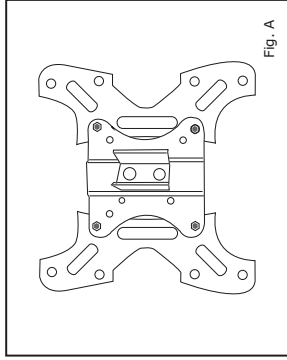

2. Take the VESA Mount (B). Using either the hardware included in the plastic bag (G) or those included with your TV, attach your screen to the VESA mount (B) by lining up all four holes on the rear of the TV with corresponding holes in the VESA mount. Tighten firmly.

Assemble the Pole Mounting Bracket to the completed VESA Bracket

3. Take the pole mounting bracket (F). Align the round hole on the VESA mount (B) with the round hole on the pole mounting bracket (F) as shown in Figure B.



4. Bolt the parts together using the supplied bolt, washer, and locking nut (E).

IMPORTANT NOTE

TIGHTEN, BUT ALLOW THE PARTS TO SWIVEL.

5. Align the crescent slot of the VESA mount (B) with the top round hole of the pole mounting bracket (F) as shown in Figure C.

6. Take the shoulder bolt (D) and slide it through the aligned crescent slot and hole. Lock the assembly in place with the washer and locking knob (D). This knob will be used to adjust the tilt of the screen as necessary.

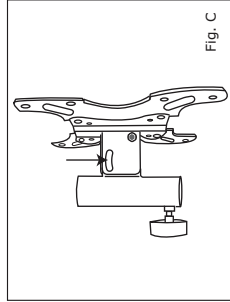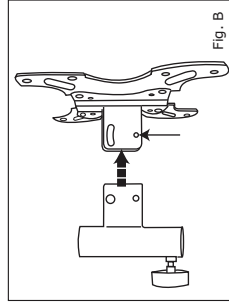


Finish Assembly

7. Take and unfold the Tripod (A). Adjust the base spread so that the OPTIMUM POSITION sticker is visible just above the leg housing as shown in Figure D.

CAUTION

TO ENSURE SAFE OPERATION OF THIS STAND, THE "OPTIMUM POSITION" STICKER MUST BE VISIBLE AS SHOWN IN FIGURE D.

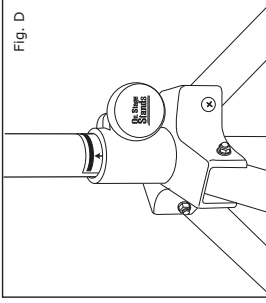

8. Be sure that the Air-Lift center shaft is low enough to comfortably mount the screen. Adjust the height by loosening/tightening the locking knob of the steel center collar.

IMPORTANT NOTE

THE AIR-LIFT PISTON REQUIRES 40LBS OF DOWNWARD FORCE TO LOWER THE SHAFT.

9. Slide the screen/pole mount assembly onto the upper shaft. Tighten the locking knob firmly.

IMPORTANT NOTE

ON-STAGE RECOMMENDS USING TWO PEOPLE TO MOUNT THE SCREEN/POLE MOUNT ASSEMBLY ONTO THE TRIPOD STAND.

CAUTION

THIS STAND WAS DESIGNED TO HOLD UP TO 50LBS. DO NOT EXCEED THE MAXIMUM WEIGHT CAPACITY.

10. Adjust screen tilt to the desired position, then slowly raise the large knob on the steel center collar. If the total weight is less than 40lbs, the screen will gently rise on its own. If the weight exceeds 40lbs, the Air-Lift will assist you as you raise the screen to the desired height.

CAUTION

FAILURE TO FOLLOW THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAN RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR DEATH.

PLEASE KEEP THIS INSTRUCTION MANUAL HANDY FOR FUTURE REFERENCE.

1273 LS7720QIK Instruction Sheet
 Outside
 1/1 C (Pantone Process Black)
 Size: 11" x 17" (Folded to 8.5" x 11")
 Print at actual size
 DO NOT Print dyelines

FP56000

ASSEMBLY INSTRUCTIONS/COMPANY INFORMATION



NEED TO SEE MORE DETAIL ON THIS PRODUCT OR THESE ASSEMBLY INSTRUCTIONS?

SCAN, or visit: on-stage.com to watch an instructional video.

REGISTER ONLINE. HERE'S WHY:

- Lightning Fast Service** - Get the fastest turn-around in the unlikely event of a warranty claim.
- Product Notifications** - We can contact you directly with product notifications and safety information.
- Better Products** - Your registration helps us to improve our products and develop new ones.

On-Stage.com

FP56000

ASSEMBLY INSTRUCTIONS

FLAT SCREEN TV STAND

Congratulations! You have purchased the FP56000 Flat Screen TV Stand. To ensure the safe use of the FP56000, please follow the assembly instructions in this manual closely.
 We hope you enjoy your new purchase!

Parts
Remove all parts from boxes and identify:

A
Tripod Stand with Airtilt Piston (Qty 1)

B
VESA Mount (Qty 1)

C
Ear Tabs for VESA mount (Includes 4 nuts and bolts)

D
Carrriage Bolt with washer and oversized plastic knob (Qty 1)

E
Lower Bolt with washer and Lo Nut (Qty 2)

F
Pole Mounting Bracket With Locking knob (Qty 1)

G - Plastic bag with additional hardware: This bag contains the hardware for mounting your TV to the VESA Mount. Please refer to your TV's user manual for proper installation:
 (4) M4x10 screws
 (4) M5x10 screws
 (4) M6x10 screws
 (4) M8x10 screws
 (4) Spacers
 (4) Size 5 washers
 (4) Size 8 washers

Tools Required:
Adjustable Wrench

Tools Required:
Adjustable Wrench



© 2015 TMS, Inc.
www.on-stage.com

