WSC7500


WORKSTATION CORNER ACCESSORY

Congratulations on your purchase of the WSC7500 Workstation Corner Accessory! Please read the following instructions carefully. We hope you enjoy your new purchase.



Screws (x20)



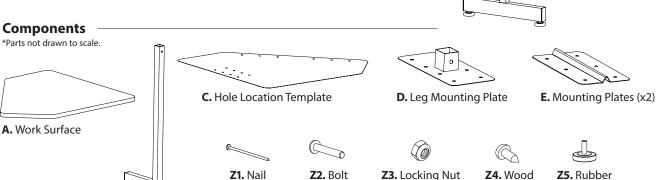

Also included: Allen Wrench

B. Metal Leg


Tools Required: Level, Hammer, #2 Phillips Head Screw Driver, & % Wrench, Transparent Tape

Assembly Instructions Visit On-Stage for the most recently-updated instructions.

Preparing the Work Surface:


Note: The Corner Accessory work surface is laminated on both sides and NOT pre-drilled to allow the flexibility of attaching to either the left or right side of your WS7500 Workstation.

- 1. Depending on location in the room, decide which side of the Workstation you intend on placing the Corner Accessory and mark one side of the work surface (A) as the TOP with transparent tape. (Instructions will show the work surface installed on the left side of the WS7500 workstation.)
- **2.** Tape the hole location template (C) to the surface opposite the TOP side.
- 3. Before creating the holes with the nail (Z1) (included in the hardware kit), ensure that the 6 holes for the brackets match correctly.
- 4. Mark nail using tape approximately 1/8" from the tip as a guide. Tap the nail approximately 1/8" into the surface with a hammer to create 14 starter holes. Remove template. (Figure A).
- 5. Align the leg mounting plate (D) and fasten using 8 wood screws (Z4) with the #2 Phillips Head Screwdriver. (DO NOT overtighten.) (Figure B).
- **6.** Align both mounting plates (F) and fasten each plate with 3 wood screws (Z4). (DO NOT fully tighten the screws.) (Figure B).

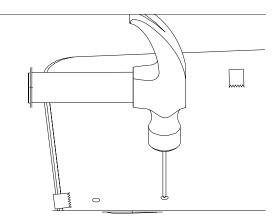

Feet (x2)

Figure A

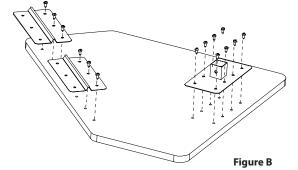



CAUTION


Attaching the Metal Leg

- 1. Locate the hole in the metal leg (B) and locate the hole in the square tubing of the leg mounting plate (D). Install the vertical leg into the square tubing of the leg mounting plate and attach with a bolt (Z2), and lock nut (Z3). (Figure C).
- 2. Install the two rubber feet (Z5) into the two holes located on the bottom of the horizontal bar on the leg. (Figure D).

Figure C Figure D

Attaching the WSC7500 to the WS7500 (MOUNTING HOLES ARE NOT PRE-DRILLED IN WS7500)

- 1. Turn the Corner Accessory right-side up and place on the proper side of the WS7500 Workstation. Align the back edges, keeping the Corner Accessory parallel with the main surface of the Workstation. Have a helper hold the two stations securely together.
- 2. From underneath the Corner Accessory, align the mounting plates so that they are straight on the bottom of the unit.
- 3. Tap the nail approximately 1/8" into the surface with a hammer to create 6 starter holes. (Figure E).
- 4. Fasten each plate with 3 wood screws.
- 5. Tighten the wood screws on the mounting plate attached to the Corner Accessory Unit.

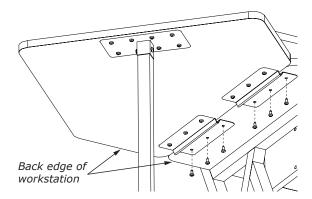


IMPORTANT: Before using your stand, be sure that all bolts and nuts are fully tightened.

Note: If desired, the height can be adjusted by spinning the small rubber feet clockwise to lower the height or counter clockwise to raise the height. Place a level on the main work surface to be sure the Workstation is level before placing any equipment on the workstation.

The WSC7500 weight capacity is 75lbs.

Optional Workspace Configurations with the WSC7500

The WSC7500 Corner Accessory can be attached to either side of the WS7500 to create the ideal workstation. Illustrated below are just a few possible options. Ask your dealer about the WSR7500 Rack Cabinet (sold separately) to

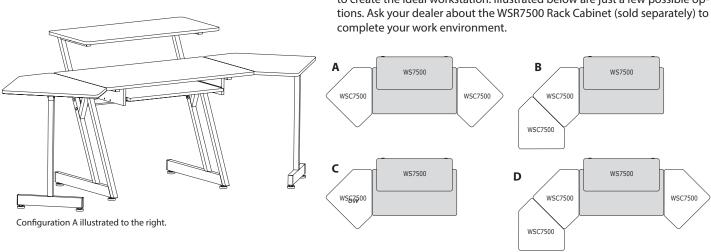

REGISTER ONLINE. HERE'S WHY:

Lightning Fast Service - Get the fastest turn-around in the unlikely event of a warranty claim. Product Notifications - We can contact your directly with product notifications and safety information. Better Products - Your registration helps us to improve our products and develop new ones.

